



FIG. 1

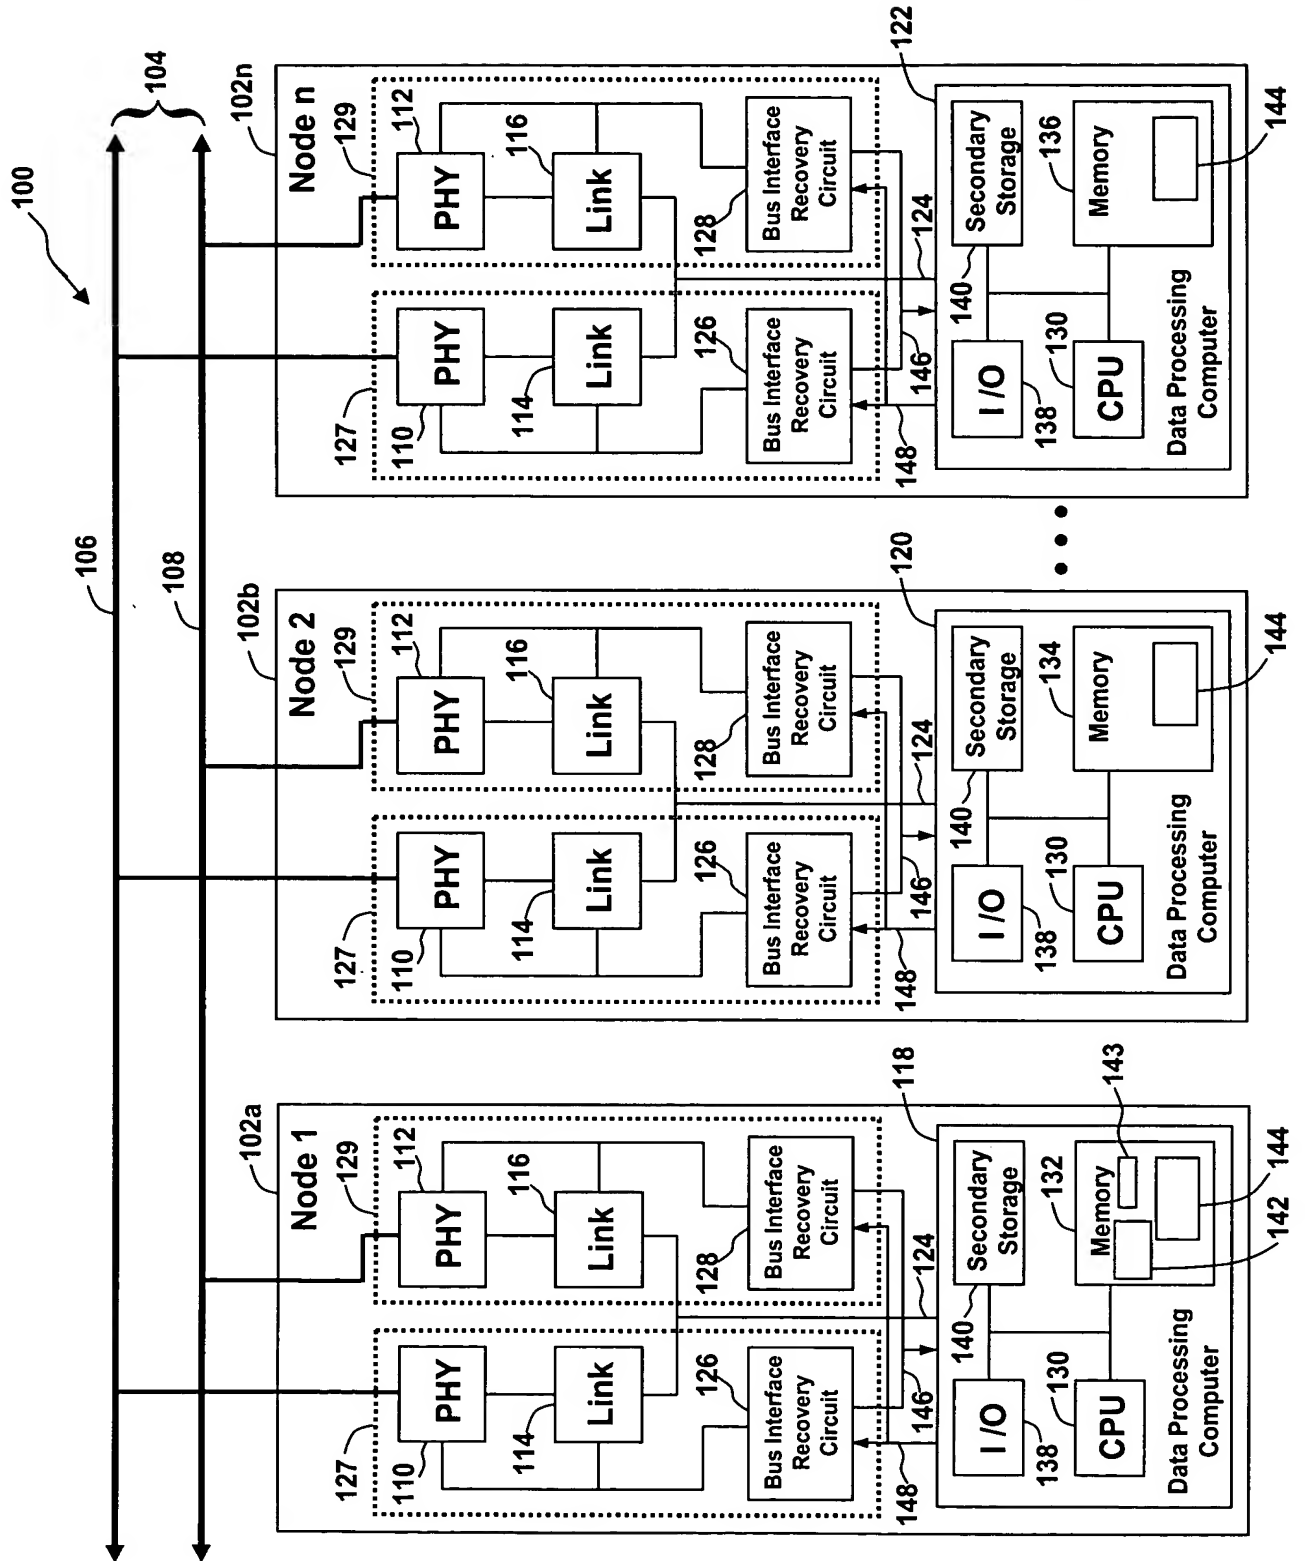


# FIG. 2

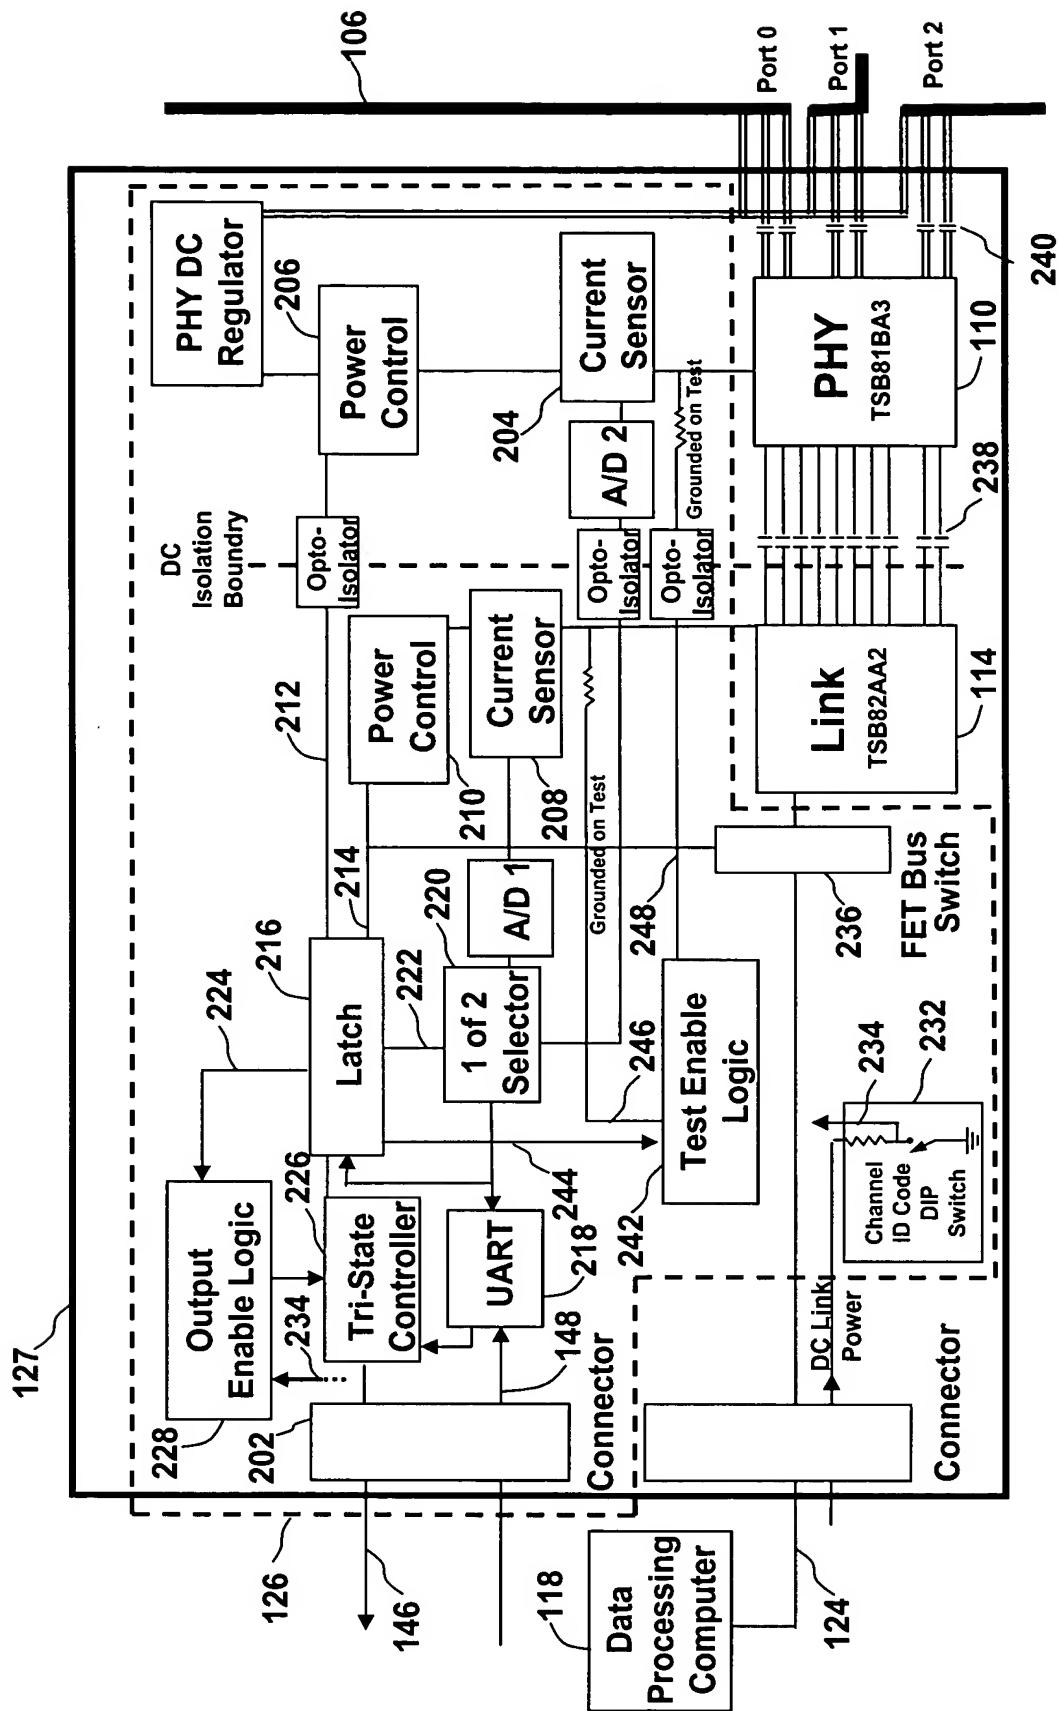


## FIG. 3

300	<u>Bit No.</u>	
	1	1 = Power Down Command, Channel A Link
	2	1 = Power Down Command, Channel A PHY
	3	1 = Power Down Command, Channel B Link
	4	1 = Power Down Command, Channel B PHY
	5	1 = Activate Current Surge Test for the Enabled Outgoing UART Source
	6	0 = Enable Channel A for Outgoing UART Data, 1 = Enable Channel B
	7	0 = Enable Monitoring of Link Current for Outgoing UART Data, 1 = Enable PHY Current Monitoring
	8	Reserved - Set to 0 in Control Latch


# FIG. 4

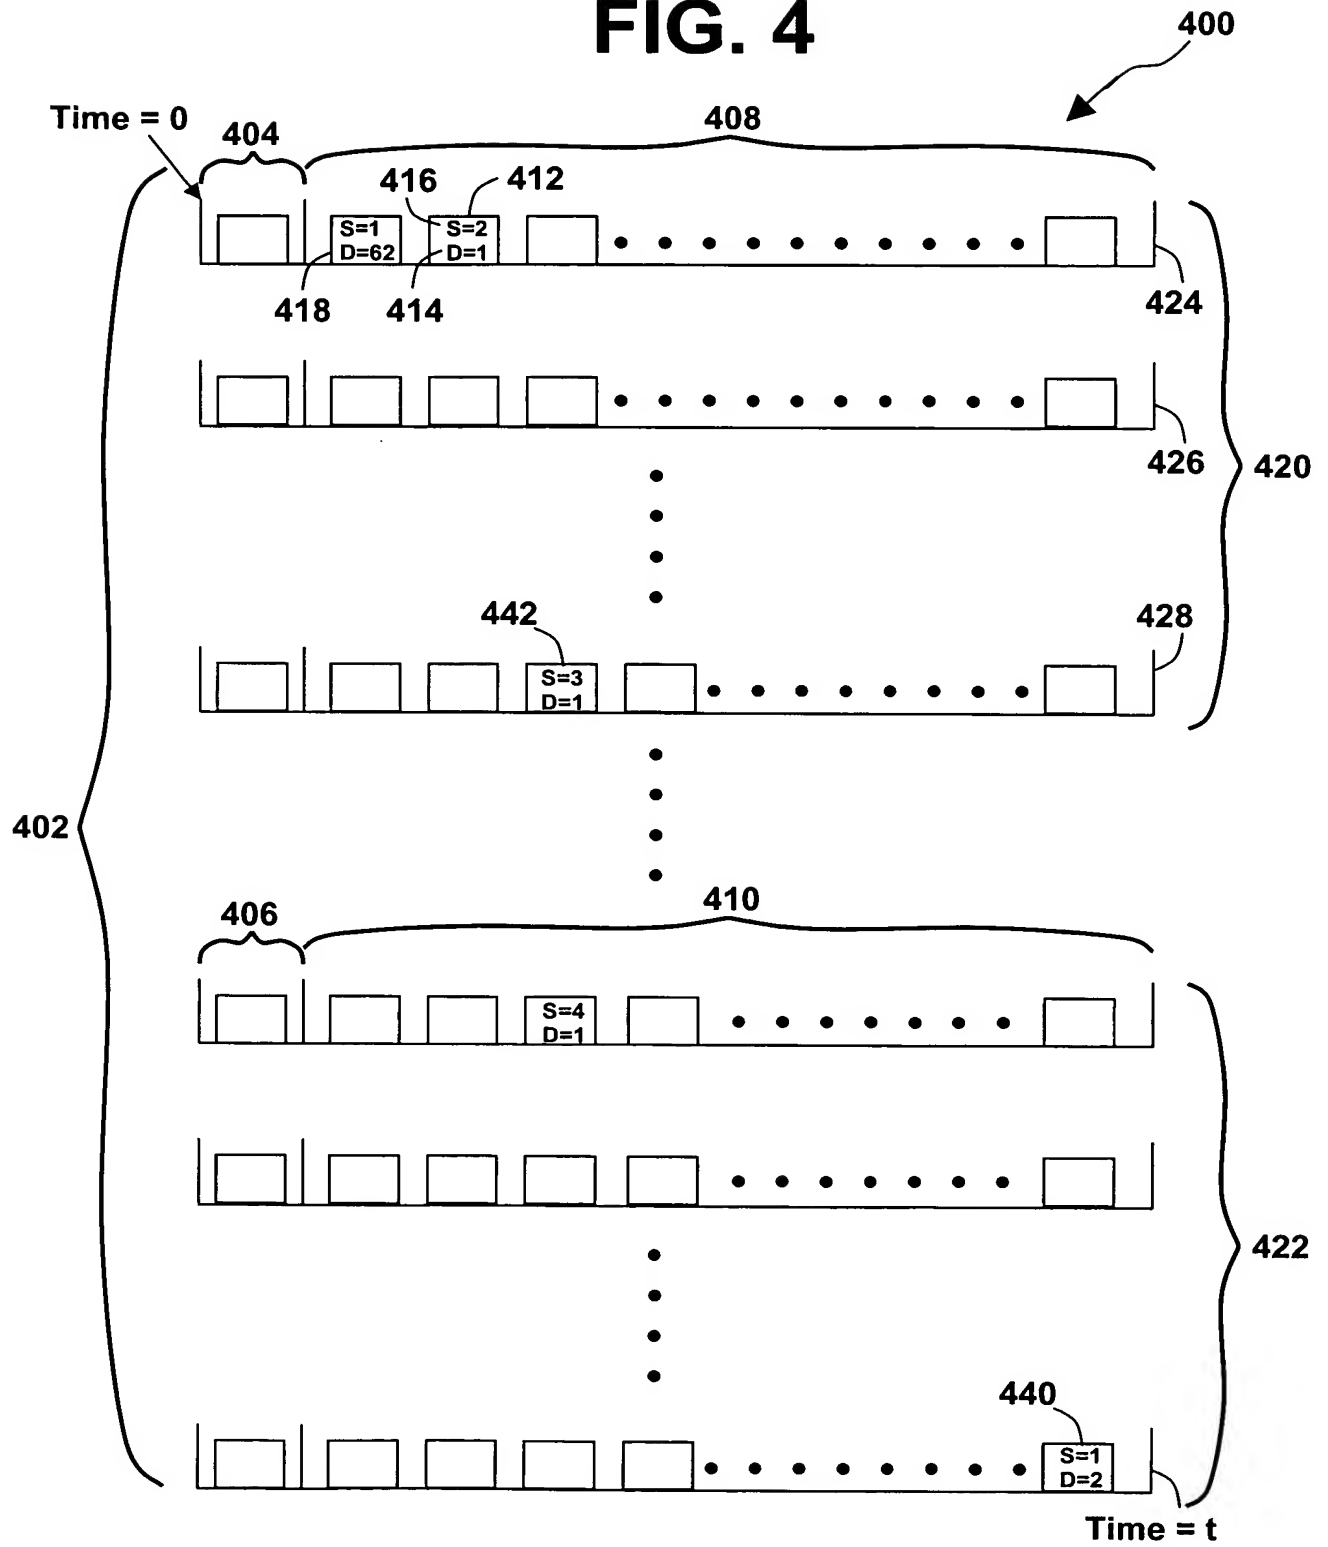


**FIG. 5**

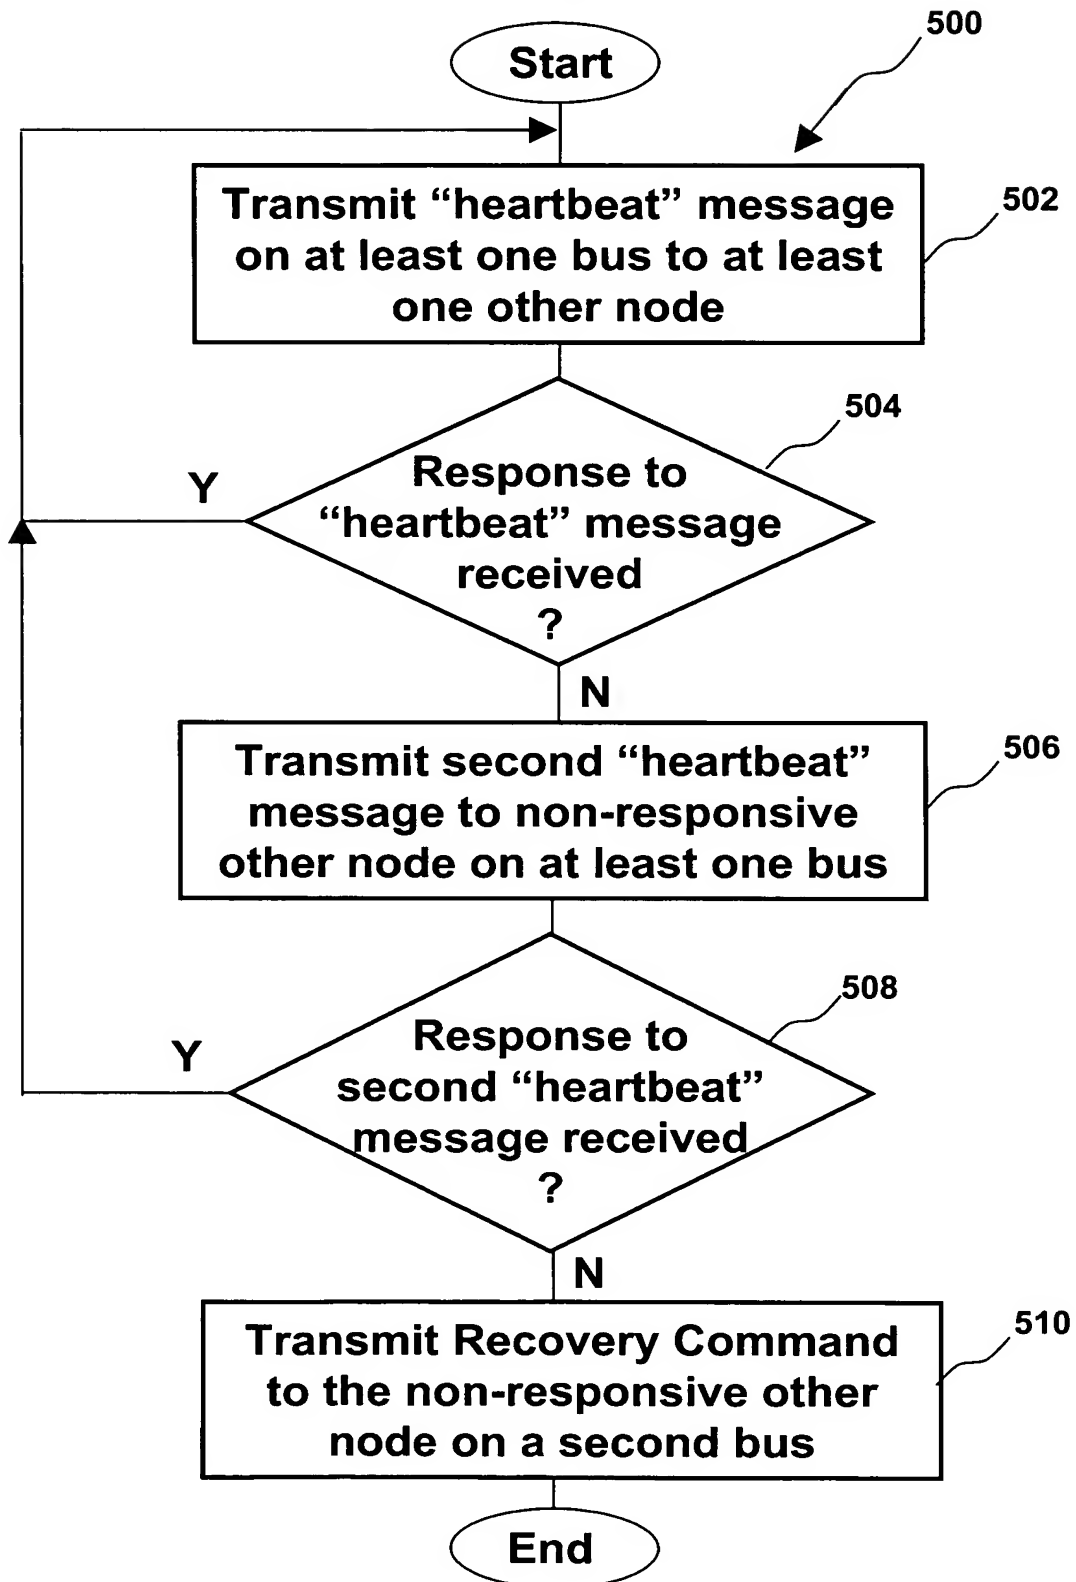


# FIG. 6

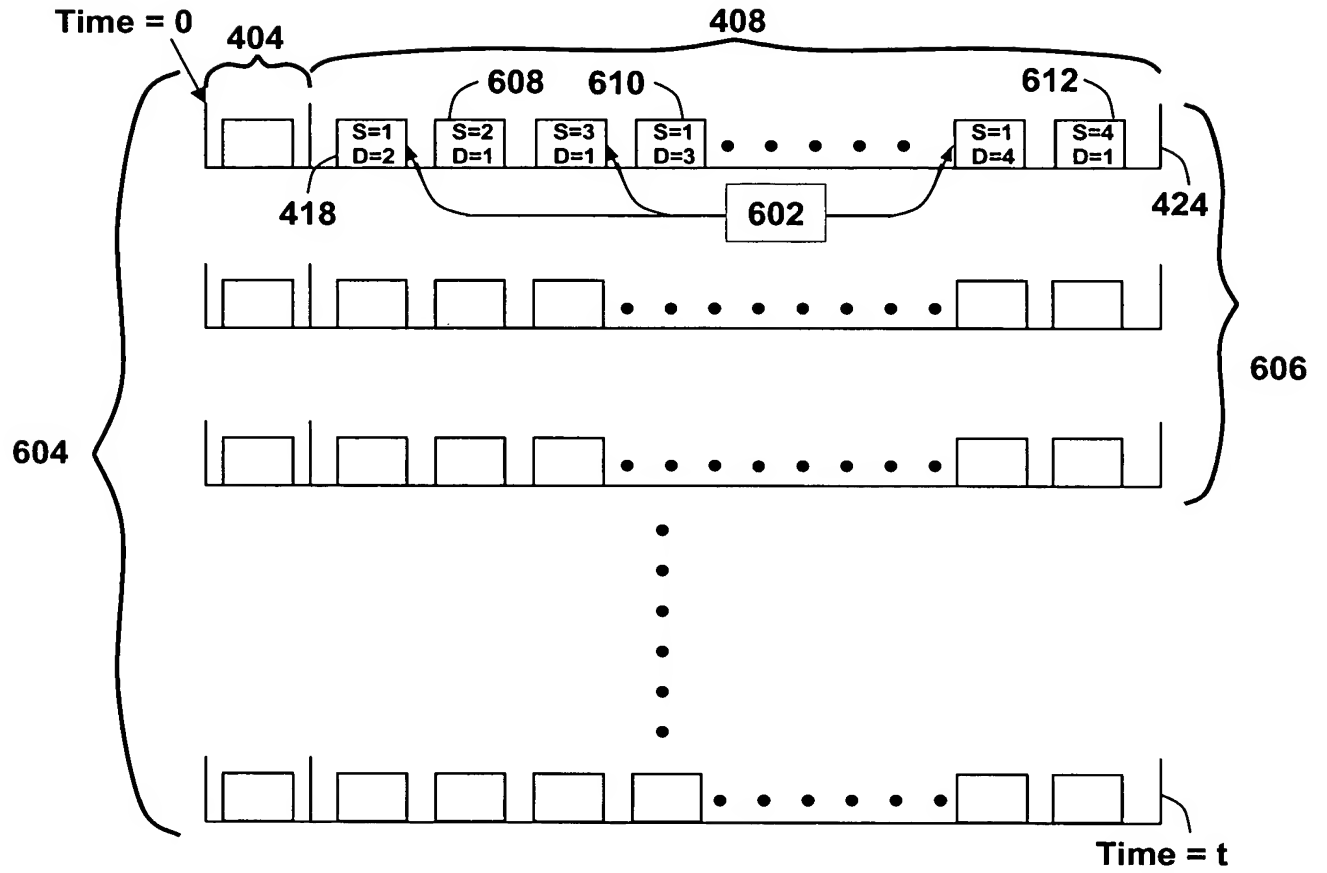

# FIG. 7

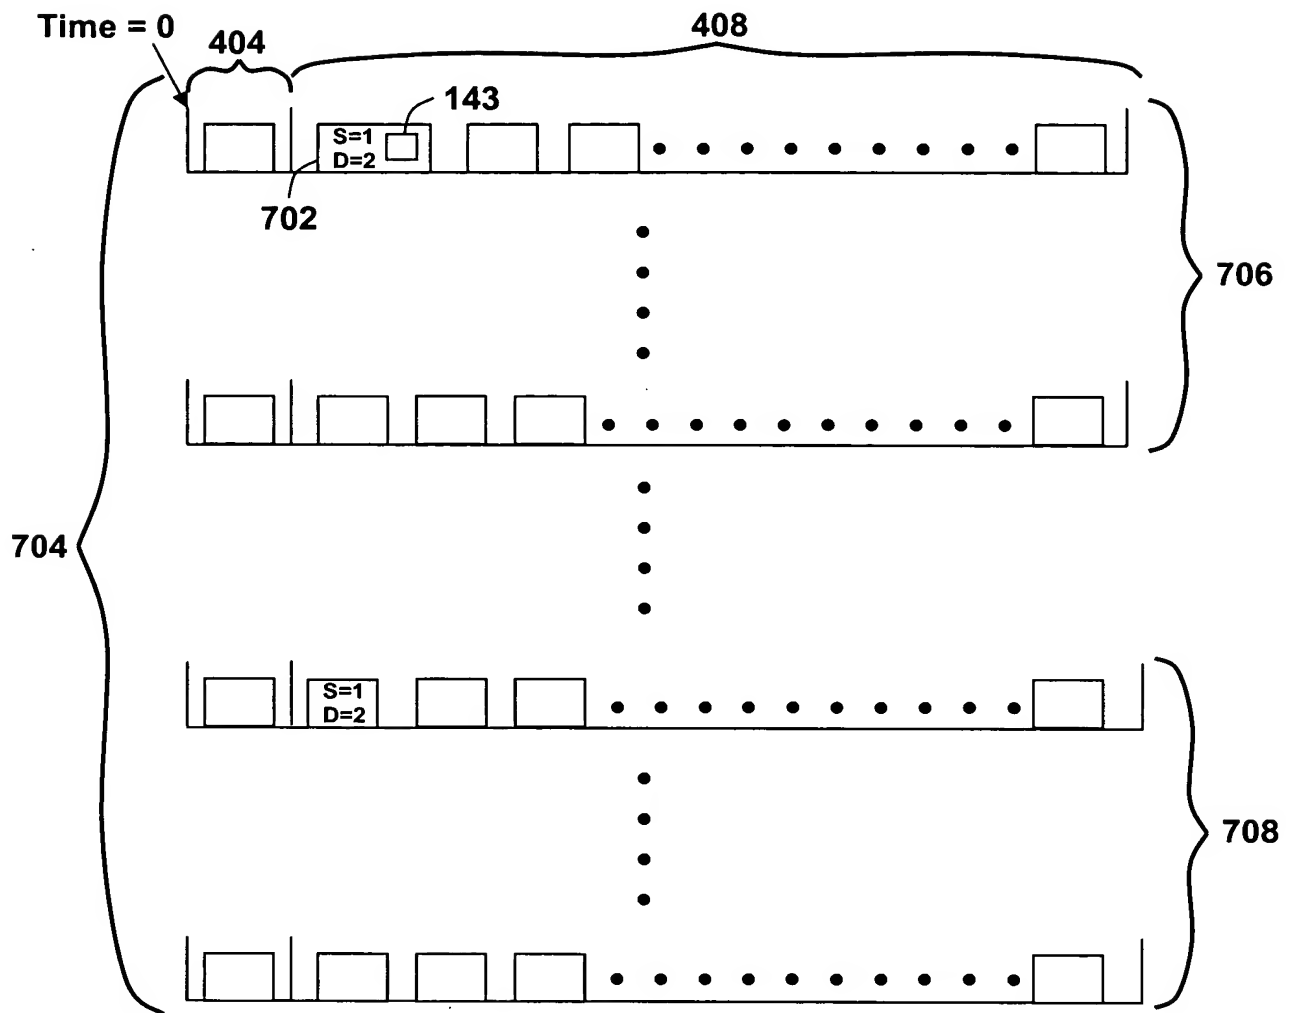


**FIG. 8**

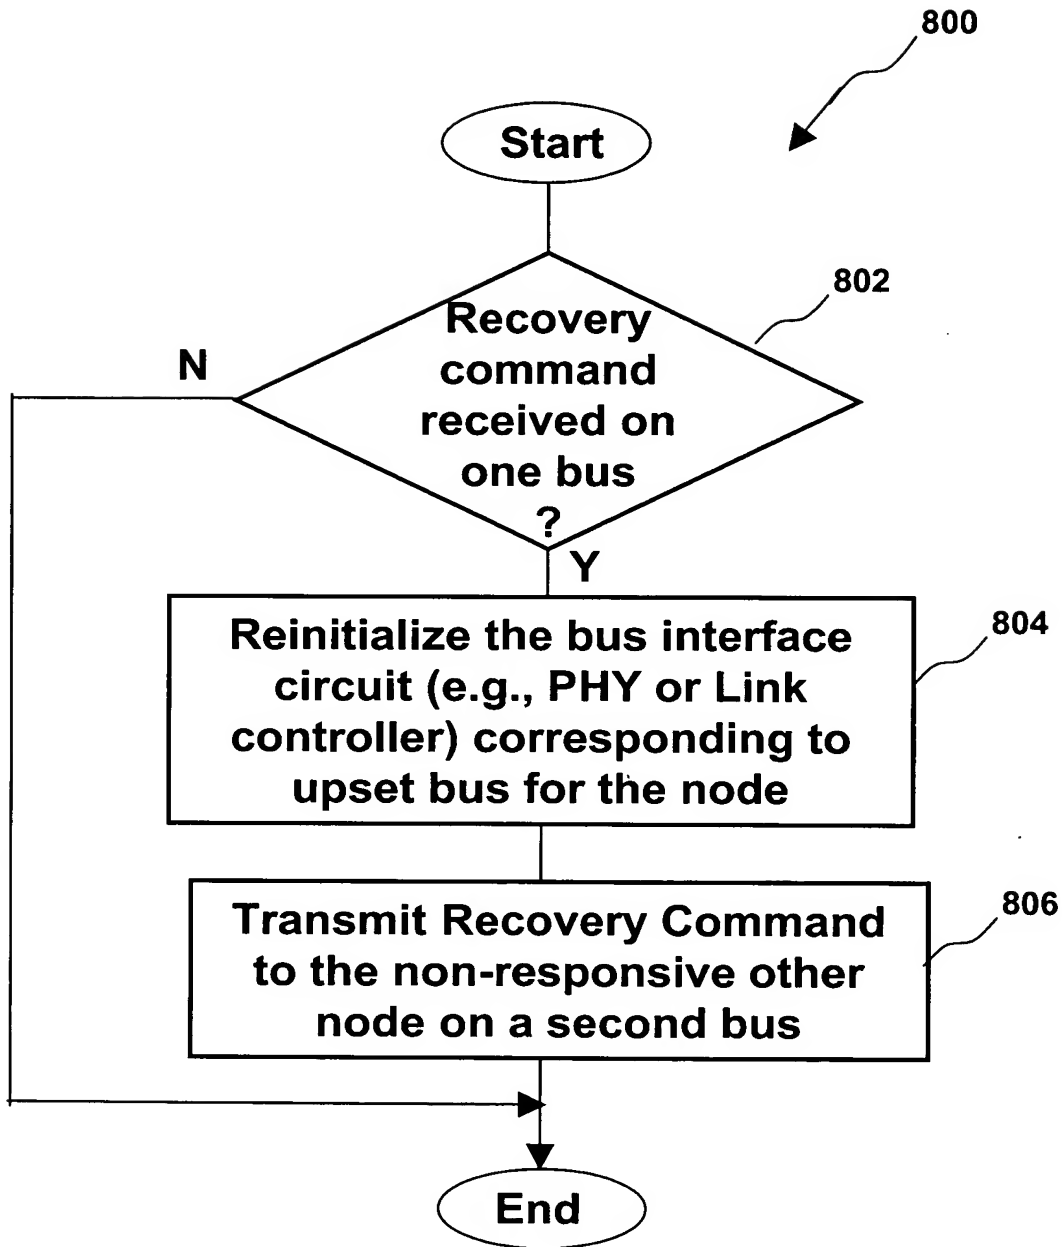




**FIG. 9**

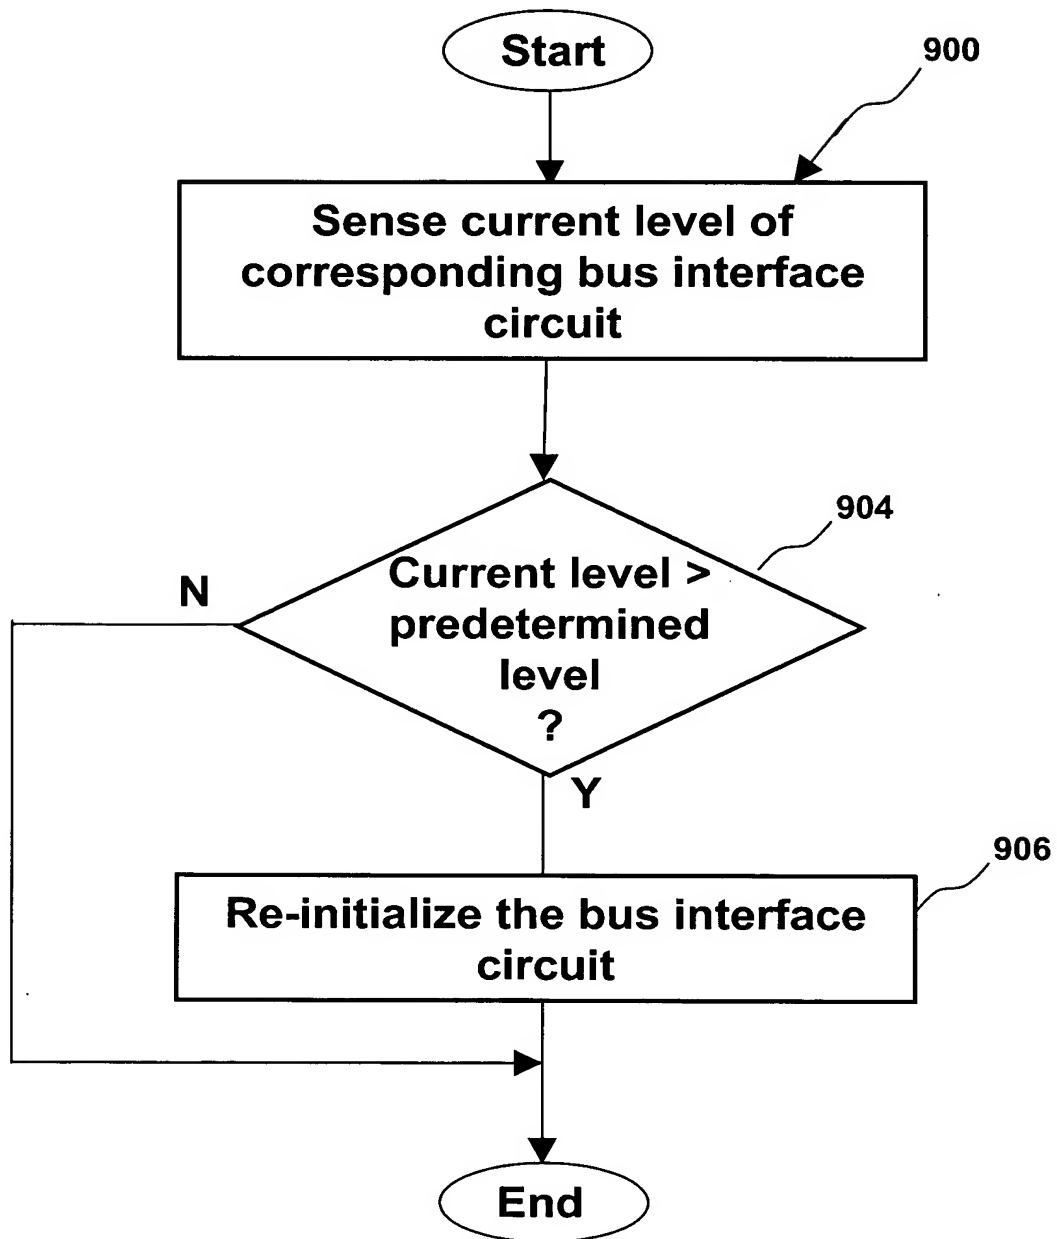

# FIG. 10

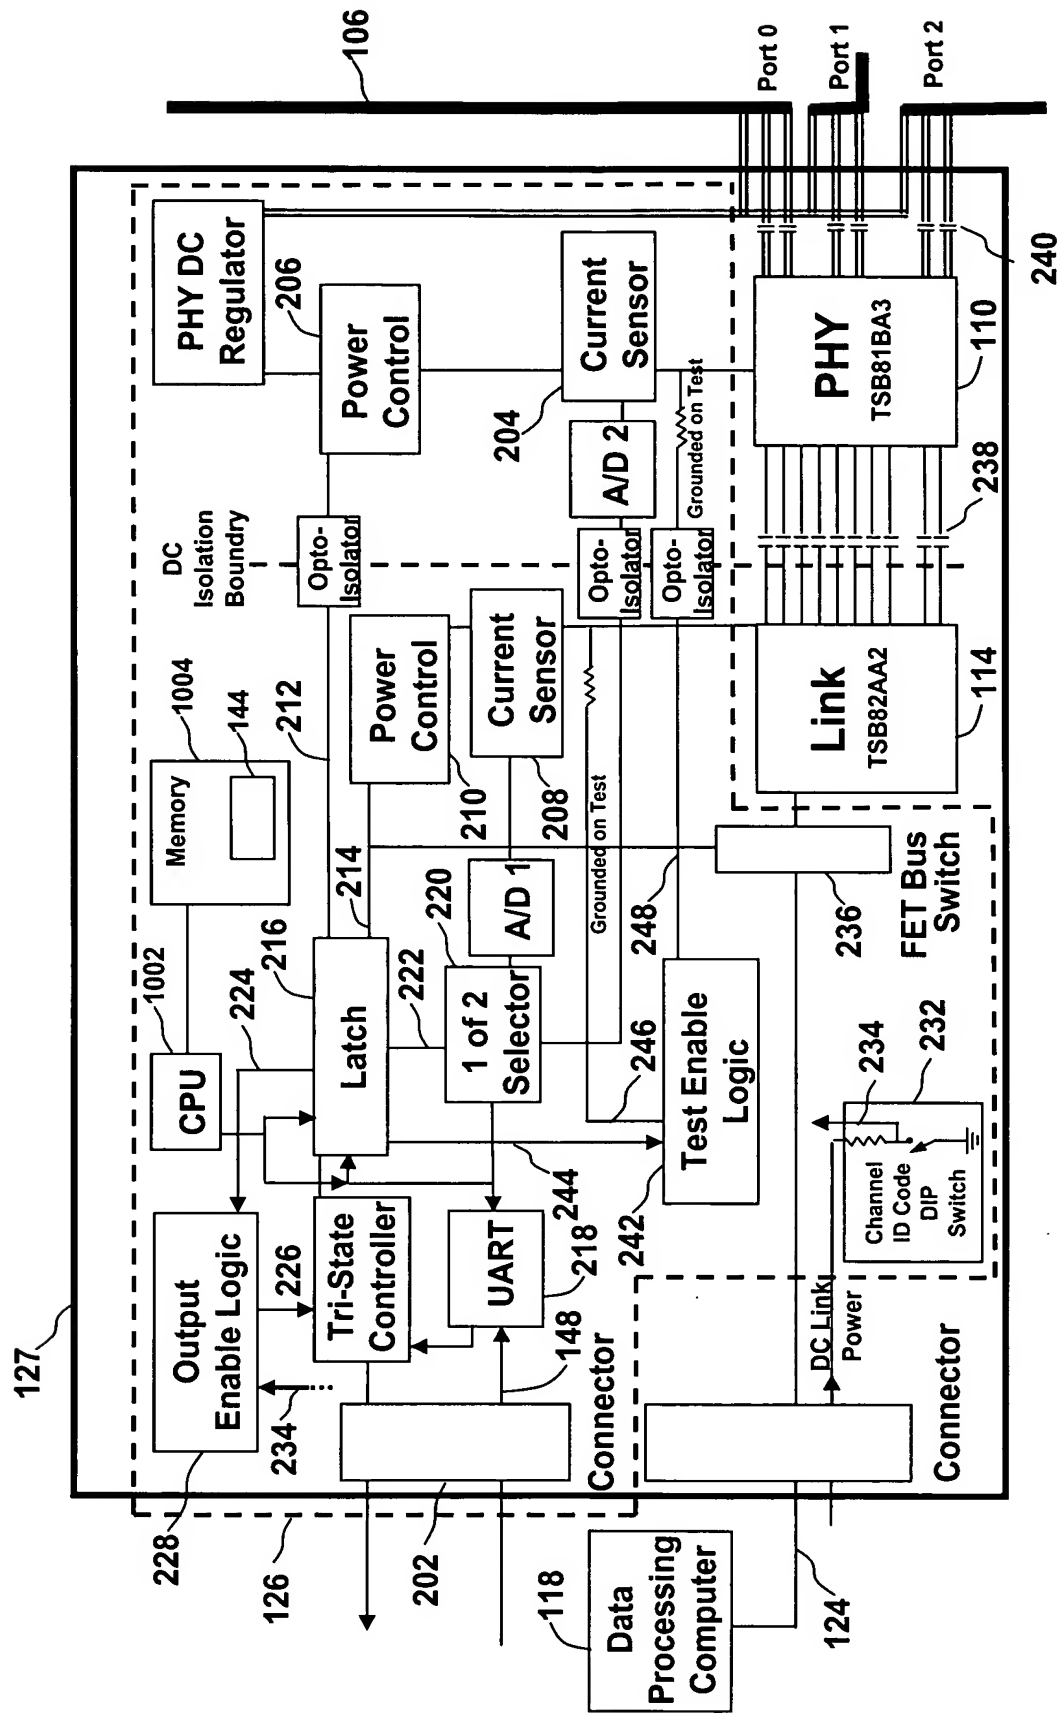

# FIG. 11

